



Braided Door Pull

Instruction Manual

Materials (long door pull):

1x 4 yard polar fleece bolt (60" wide)

1x 1" solid metal O ring (no carabiner, clips, or key rings)

Cut the fleece into 3" x 144" strips.

Materials (short door pull):

1x 2 yard polar fleece bolt (60" wide)

1x 1" solid metal O ring (no carabiner, clips, or key rings)


Cut the fleece into 3" x 72" strips.

Note: Fleece color must be either Black, Dark Blue/Navy, or Dark Brown

**Please mail or drop off
completed door pulls at:**


Paws With A Cause
4646 Division Ave, Wayland, MI 49348

Purchase Materials

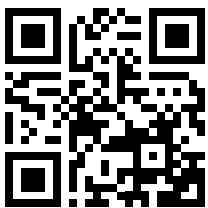

Polar Fleece

<https://a.co/d/032CU0xS>

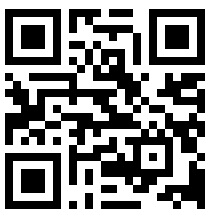


Metal O Ring

<https://a.co/d/0dGvFEjV>



Materials & Finished Product

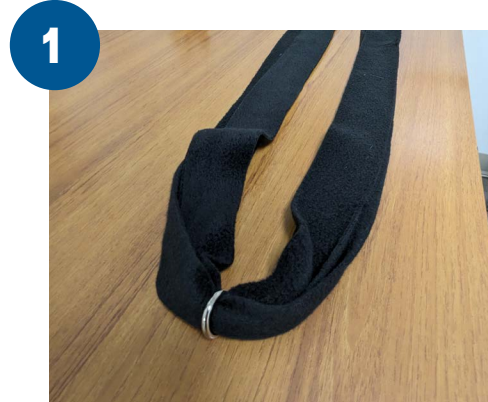

Thread both strips of fleece through the metal ring. The ring should rest at the midpoint of the strips. This is where the knot will begin.




With the ring centered, separate the two strips of fleece so they cross each other.



Starting on any end, loop and lay each fleece strip over the next adjacent strip in a clockwise pattern. You will end up with a square.



Thread the final strip through the loop of the first strip.

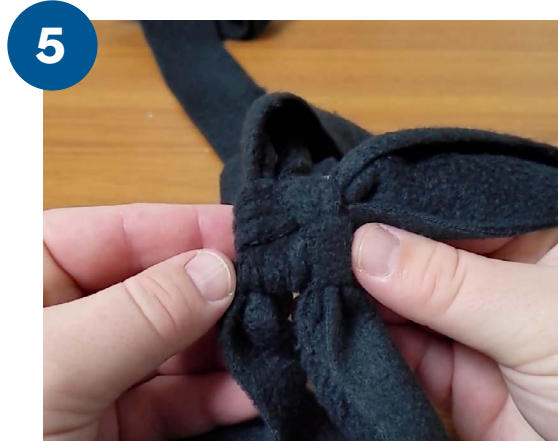

Tighten the strips until the box knot is approx. 1 inch X 1 inch in size. This will complete the first layer of the box knot.

Tip - It is recommended to anchor the metal ring between your fingers to help tighten the strips more uniformly.



6



To start the next layer of the knot, gather the strip on the bottom side. Like step 3, loop and lay each fleece strip over the next adjacent strip, now in a counterclockwise pattern. The last strip will thread through the first loop. Adjust and tighten to approx 1x1 inch.

7



Repeat step 6, now in a clockwise pattern again. Continue until the shortest strip is about 5 inches long, each layer alternating clockwise and counterclockwise.

Tip - If you lose track of whether you are following a clockwise or counterclockwise pattern, you can tell by which side of the knot the bottom strip is on. If the bottom strip is on the right half of the knot when you start the layer, you will complete the layer going counterclockwise. If the bottom strip is on the left half of the knot, you will complete the layer going clockwise.

8



Tighten the final layer as tight as possible, then knot each strip at the end so it can't be pulled back through the layer.

9



Trim any excess material.
Your door pull is complete!